

# SOCKET 370/462

ARKUA COOLER

## INSTALLATION



### Caution


Please read the following instructions before you install ARKUA Cooler.

#### INSTALLATION


##### Step 1 Apply thermal grease or pad

If there is a protective sticker on the bottom of heatsink, remove it first.  
Apply thermal grease evenly on CPU Die.

[ Figure 1 ]

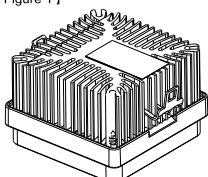


[ Figure 2 ]

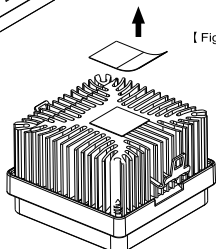

##### Step 2 Cooler Installation

Position cooler evenly on CPU socket as illustrated in Figure 3. Then clip the buckles according to priority as instructed in Figure 4.


[ Figure 3 ]

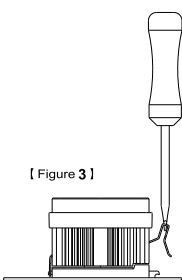

[ Figure 4 ]

※ Please pay attention to the position between clip and CPU socket when assembling


Any improper alignment will reduce the ability of heat spreading and can cause damage to the CPU and its socket.

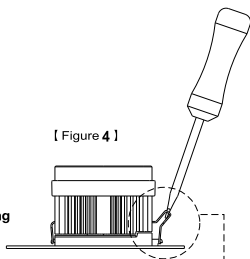


#### DISMOUNT/DISASSEMBLE

##### Step 1 Dismount cooler from CPU socket

Use a suitable flathead screwdriver, plug into the dismount aperture, see Figure 5.

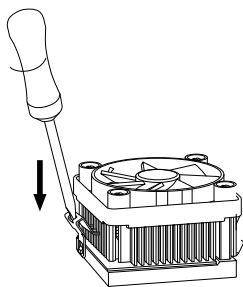


[ Figure 5 ]

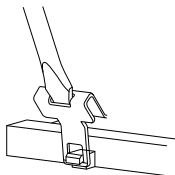

##### Step 2 Release clip

Carefully push clip down and outward to release clip from CPU socket. see Figure 6, 7, then release clip from other side.

[ Figure 6 ]

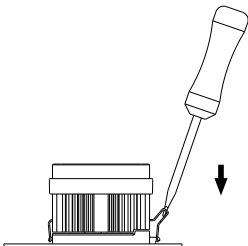

[ Figure 7 ]

